

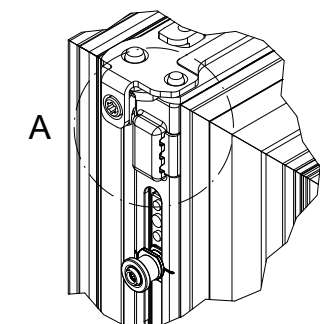
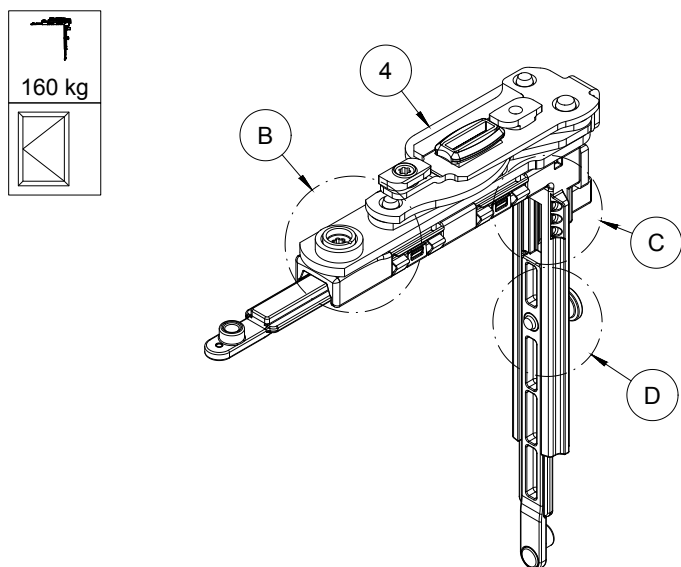
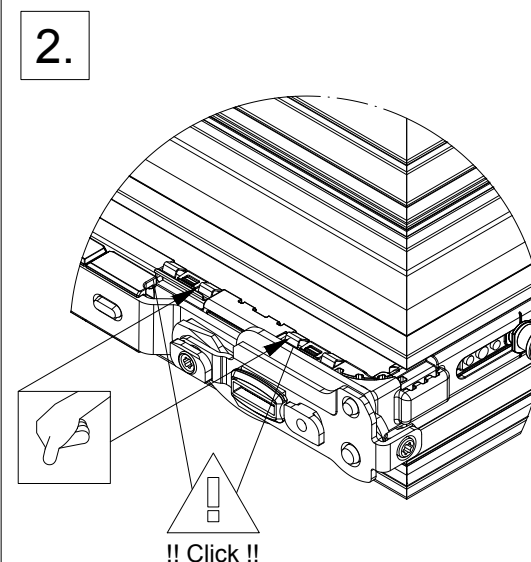
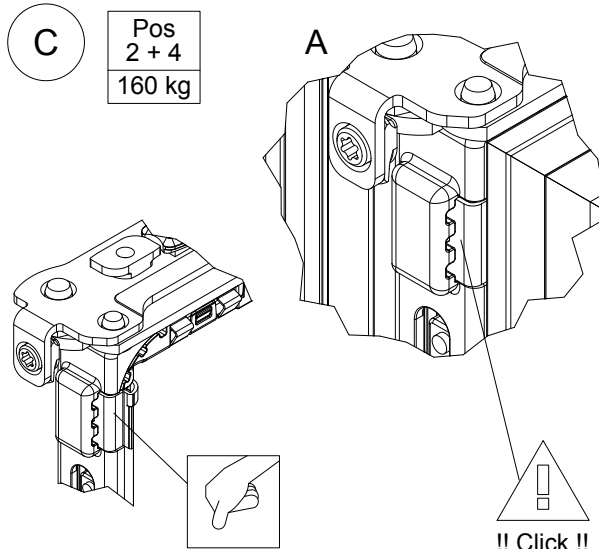
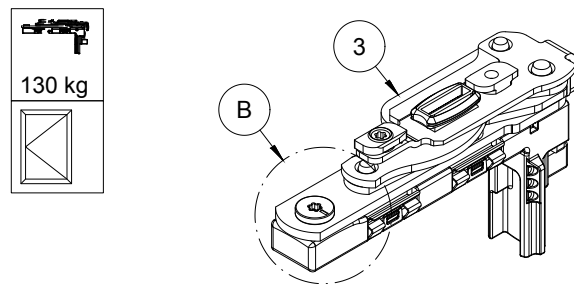
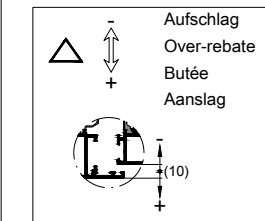
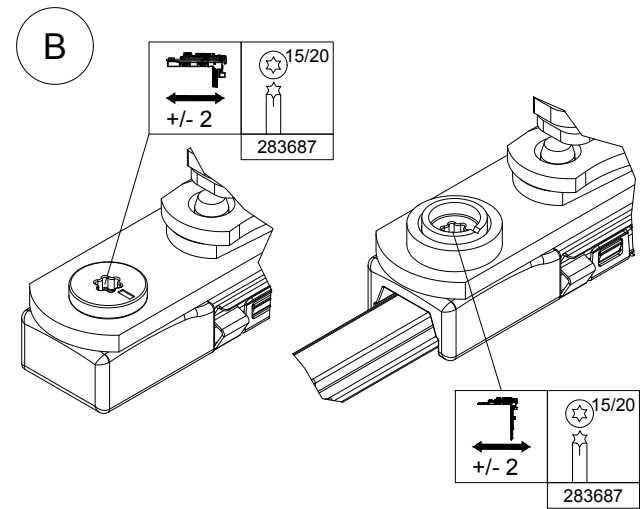
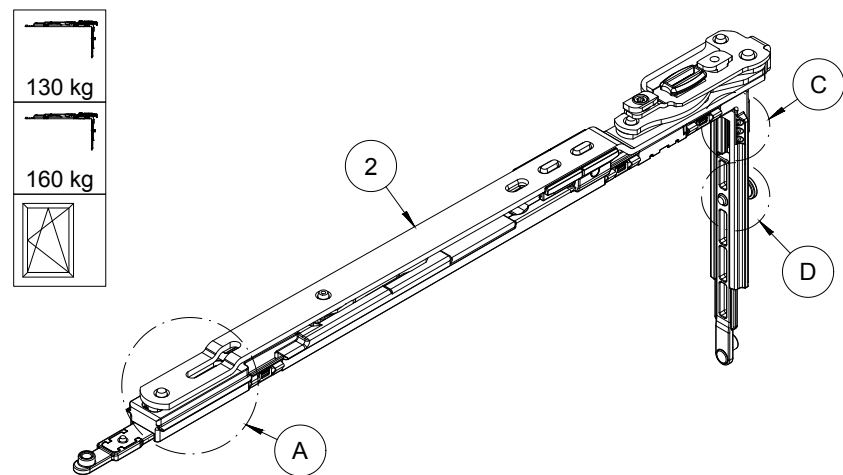
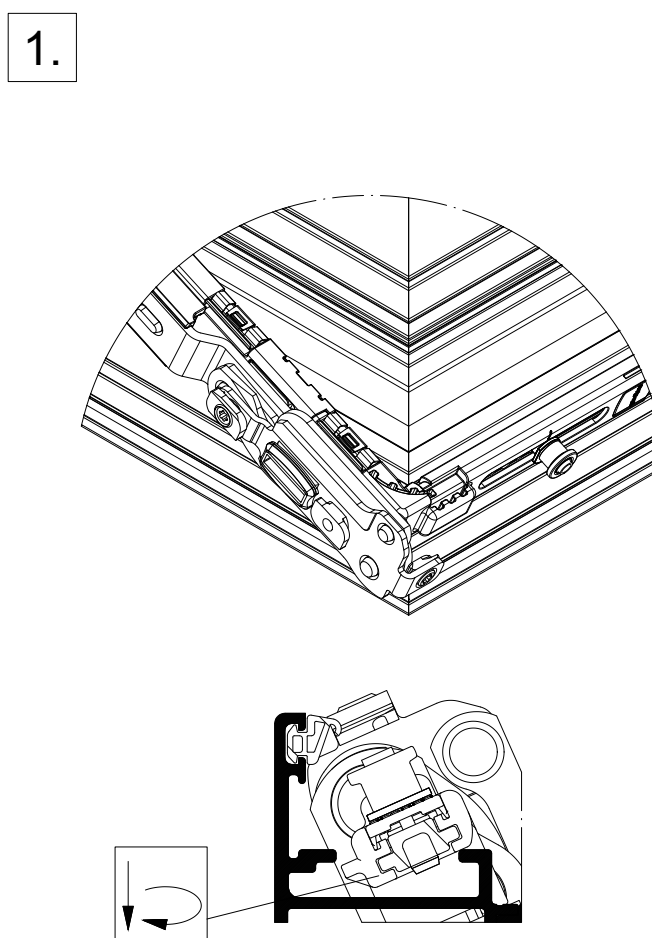
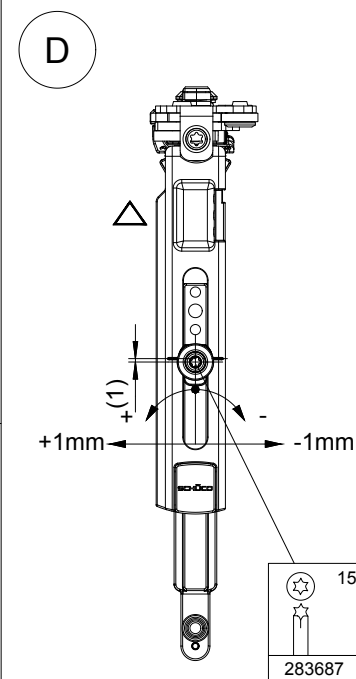
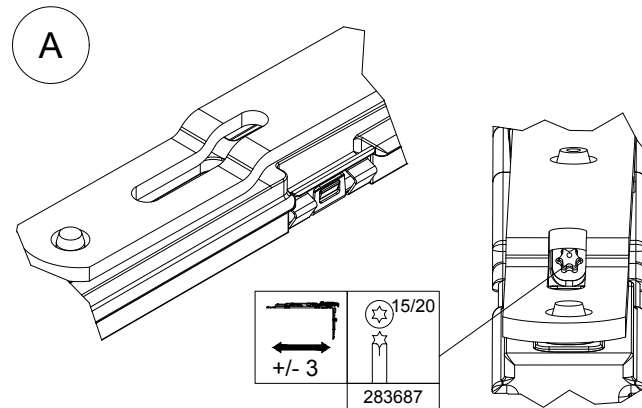
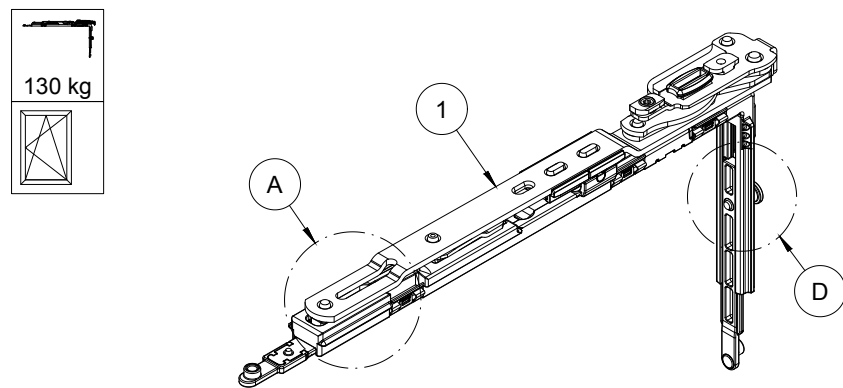
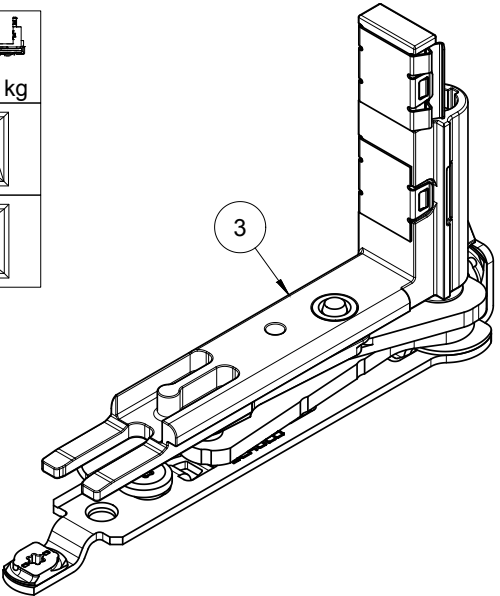

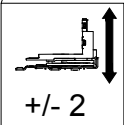
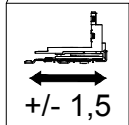
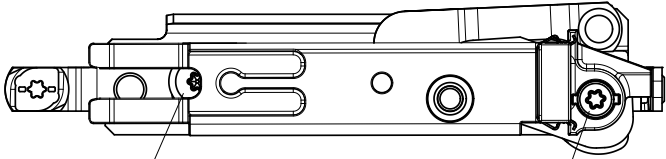
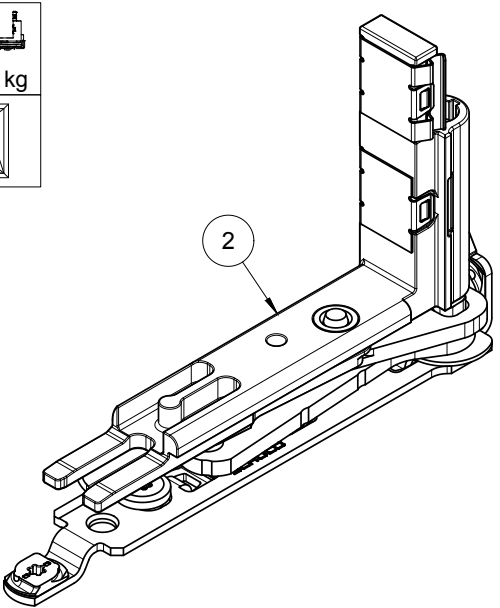

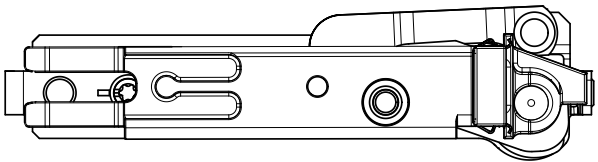


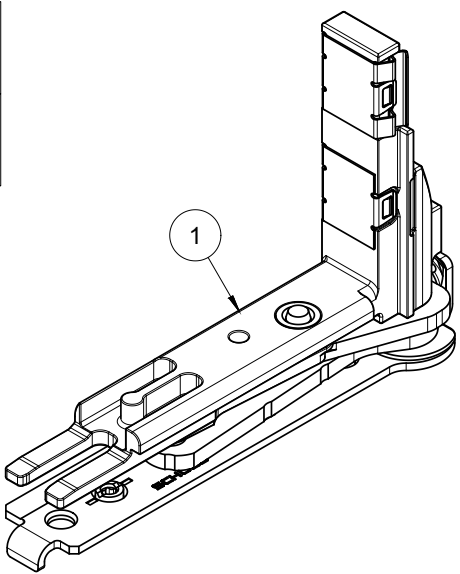


Pos			LS	RS	
1	DK	130 kg	277011	277012	1
	KvD	130 kg	277017	277018	10
			277153	277154	1
			277155	277156	-
2	DK	130 kg	277013	277014	1
	KvD	130 kg	277019	277020	10
			277157	277158	1
			277159	277160	10
	DK	160 kg	277313	277314	1
	KvD	160 kg	277319	277320	10
3	D	60 kg	277357	277358	1
			277363	277364	-
4	D	160 kg	277089	277090	1
			277091	277092	10



Schüco AvanTec SimplySmart - Beschlagmontage - Bandseite oben - Scheren	K1011805
Schüco AvanTec SimplySmart - Fittings installation - Hinge side on top - stays	0403
Schüco AvanTec SimplySmart - Montage des ferrures - Côté haut paumelles - compas	Schüco AvanTec SimplySmart
Schüco AvanTec SimplySmart - Beslagmontage - Scharnierzijde boven - scharen	



1.

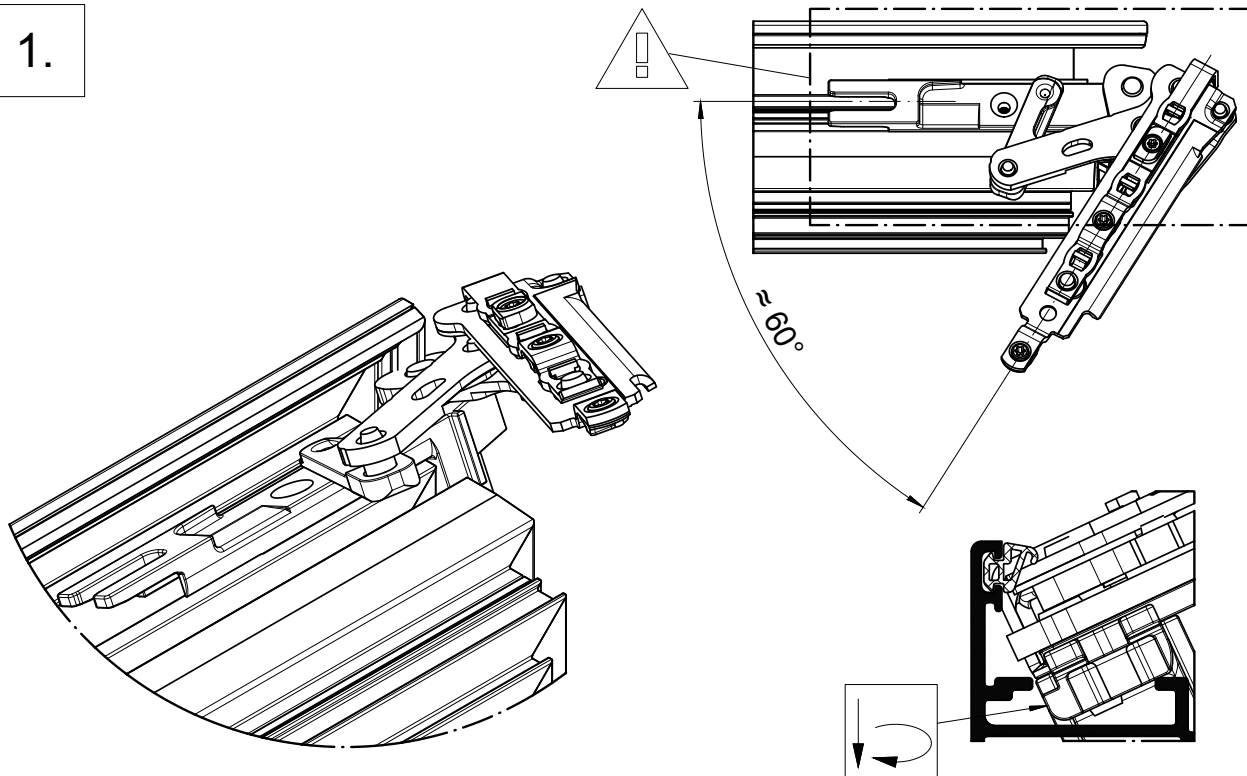

2.

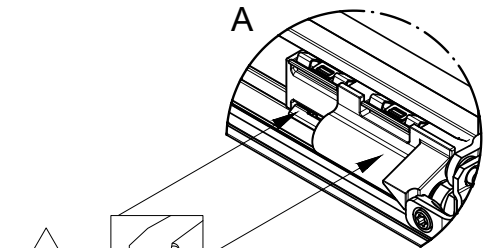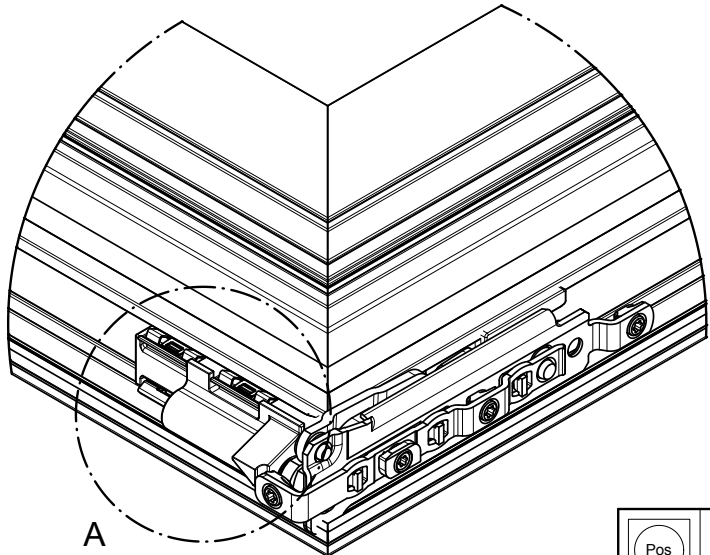

Pos				
1	60 kg	277239	277240	1
		277241	277242	10
2	130 kg	277007	277008	1
		277009	277010	10
3	160 kg	277173	277174	1
		277175	277176	10

Schüco AvanTec SimplySmart - Beschlagmontage
- Bandseite unten - Ecklager

K1011806

Schüco AvanTec SimplySmart - Fittings installation
- Hinge side at bottom - corner pivots

0302

Schüco AvanTec SimplySmart - Montage des ferrures
- Côté bas paumelles - Pièce d'appui

Schüco AvanTec SimplySmart - Beslagmontage
- Scharnierzijde onder - hoeksteun

Schüco AvanTec
SimplySmart